


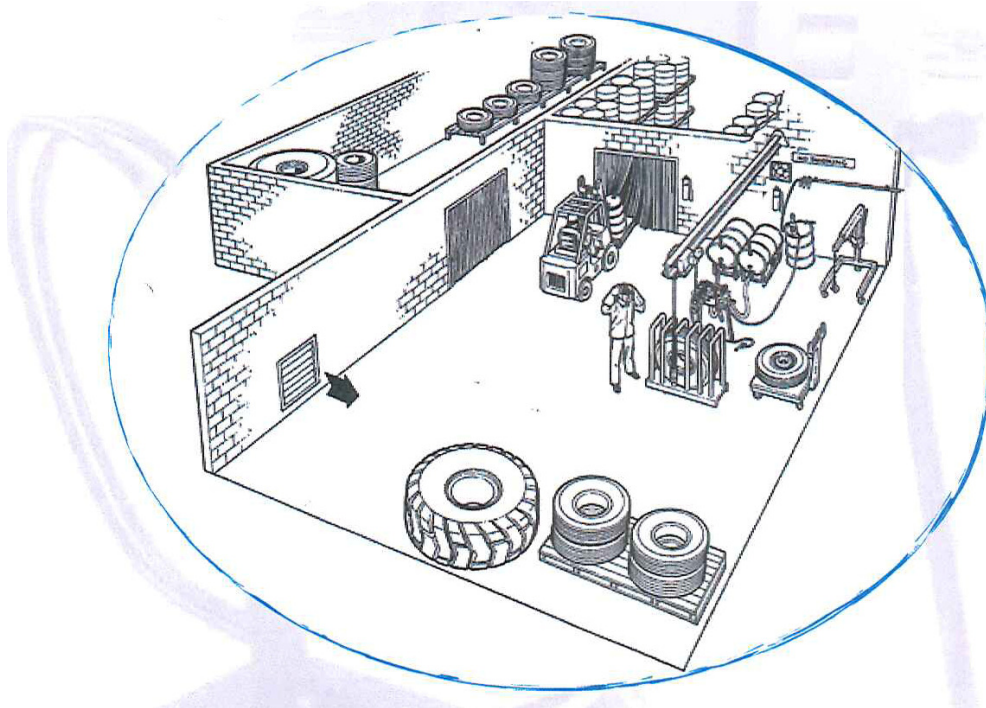

Recommended Layout For Tire Filling Area

Accella Tire Fill Systems suggests a well-lighted, well ventilated area in which to use the 7200 Pneumatic Pumping System. Business volume, naturally, determines space requirements, but certain considerations must be taken into account when planning the most efficient use of available space. Some things to be considered are space for tires, material storage, working area and curing. Minimum space requirement is about 400 square feet. Temperatures should be maintained about 70°F indoors. The figure below is a suggested layout for use of a typical tire filling area.



Fire Extinguishers

You will be working with highly flammable solvents, therefore, an approved fire extinguisher, in good working order, is absolutely essential.

